

# RIPARIAN AREA MANAGEMENT

---

TR 1737-9 1993

## *Process for Assessing Proper Functioning Condition*



**U.S. Department of the Interior**

**Bureau of Land Management**

# RIPARIAN AREA MANAGEMENT

*Process for Assessing  
Proper Functioning Condition*

**by**

U.S. Department of the Interior  
Bureau of Land Management  
Proper Functioning Condition Work Group

Don Prichard - Work Group Leader  
Riparian-Wetland Coordinator  
Service Center, Colorado

## **Work Group**

Hugh Barrett  
Riparian-Wetland Coordinator  
Oregon State Office, Oregon

Karl Gebhardt  
Hydrologist  
Idaho State Office, Idaho

Jim Cagney  
Range Conservationist  
Grass Creek Resource Area, Wyoming

Dr. Paul L. Hansen  
Plant Ecologist - School of Forestry  
University of Montana, Montana

Ron Clark  
Watershed Specialist  
Colorado State Office, Colorado

Brenda Mitchell  
Riparian-Wetland Coordinator  
Colorado State Office, Colorado

Jim Fogg  
Hydrologist  
Service Center, Colorado

Dan Tippy  
Supervisory Natural Resource  
Specialist  
Deschutes Resource Area, Oregon

Technical Reference 1737-9  
1993, Revised 1995

U.S. Department of the Interior  
Bureau of Land Management  
Service Center  
P.O. Box 25047  
Denver, CO 802250047

# Acknowledgements

Management of riparian-wetland systems is a cooperative effort among individuals, interest groups, and State and Federal agencies. To assemble a document about such a valuable resource requires the assistance and support of many individuals and agencies. The work group wishes to acknowledge Mike Crouse, Kathy Cushman, Wayne Elmore, Vito Ciliberti, Dan Hinckley, Ron Hooper, Russ Krapft, Steve Leonard, Barb Masinton, Jim Roscoe, Alan Schloss, Don Waite, and Jack Williams, all from BLM, and Sherm Jensen, from White Horse Associates, for playing an important role in the development of this document.

The work group would also like to acknowledge those persons, too numerous to list, who reviewed this document for their various agencies or interest groups, providing valuable comments and helping make it the quality document that it is.

The work group also extends a special thank you to Linda Hill (Writer/Editor) and Jaine Koselak (Visual Information Specialist) of the Service Center's Technology Transfer Staff for doing a fine job in editing, layout, design, and production of the final document, and to Renee Borrego (Colorado State Office) for designing some of the illustrations in the document.

# Table of Contents

	Page
I. Introduction .....	1
A. Purpose .....	1
B. Approach .....	2
C. Definitions .....	2
II. Process .....	4
A. Review Existing Documents .....	4
B. Analyze the Definition .....	5
C. Assess Functionality .....	5
1. Attributes and Processes .....	5
2. Capability and Potential .....	10
3. Functioning Condition .....	11
III. Instituting the Process .....	15
A. Planning .....	15
B. Management .....	15
C. Monitoring .....	16
IV. Summary .....	17
Literature Cited .....	19
Glossary of Terms .....	21
Appendix A - Interdisciplinary Team .....	23
Appendix B - Reporting Table .....	27
Appendix C - Channel Evolution Examples .....	31
Appendix D - Riparian-Wetland Functional Checklist .....	37
Appendix E - Riparian- Wetland Examples .....	43

# Process for Assessing Proper Functioning Condition

## I. Introduction

The Bureau of Land Management (BLM) has responsibility for 269 million acres of public lands (USDI, 1992) that sustain a variety and abundance of resources. These resources are prized for their recreation, fish and wildlife, cultural, and historic values, as well as their economic values, and for such uses as livestock production, timber harvest, and mineral extraction. Riparian-wetland areas, though they comprise less than 9 percent of the total land base, are the most productive and highly prized resources found on BLM lands.

Federal policy defines wetlands as *areas that are inundated or saturated by surface or ground water at a frequency and duration sufficient to support, and which, under normal circumstances do support, a prevalence of vegetation typically adapted for life in saturated soil conditions.* BLM Manual 1737, *Riparian- Wetland Area Management*, includes *marshes, shallow swamps, lakeshores, bogs, muskegs, wet meadows, estuaries, and riparian areas as wetlands.*

BLM's manual further defines riparian areas as *a form of wetland transition between permanently saturated wetlands and upland areas. These areas exhibit vegetation or physical characteristics reflective of permanent surface or subsurface water influence. Lands along, adjacent to, or contiguous with perennially and intermittently flowing rivers and streams, glacial potholes, and the shores of lakes and reservoirs with stable water levels are typical riparian areas. Excluded are such sites as ephemeral streams or washes that do not exhibit the presence of vegetation dependent upon free water in the soil.*

Riparian-wetland areas are grouped into two major categories: 1) lentic, which is standing water habitat such as lakes, ponds, seeps, bogs, and meadows, and 2) lotic, which is running water habitat such as rivers, streams, and springs.

### A. Purpose

The Federal Land Policy and Management Act (FLPMA) of 1976 directs BLM to manage public lands in a manner that will provide for multiple use and at the same time protect natural resources for generations to come. In addition to FLPMA, numerous laws, regulations, policies, Executive orders, and Memorandums of Understanding (MOUs) direct BLM to manage its riparian-wetland areas for the benefit of the nation and its economy.

Under BLM's mandate of multiple-use management, a variety of activities such as livestock grazing, timber harvest, mineral extraction, recreation, and road and transportation corridor construction takes place on public lands. If not managed correctly, these activities can impact the quality of riparian-wetland areas.

In 1991, the BLM Director approved the *Riparian- Wetland Initiative for the 1990's*, which establishes national goals and objectives for managing riparian-wetland resources on public lands. One of the chief goals of this initiative is to restore and maintain riparian-wetland areas so that 75 percent or more are in proper functioning condition (PFC) by 1997. **The overall objective of this goal is to achieve an advanced ecological status, except where resource management objectives, including PFC, would require an earlier successional stage, thus providing the widest variety of vegetation and habitat diversity for wildlife, fish, and watershed protection.** This objective is important to remember because riparian-wetland areas will function properly long before they achieve an advanced ecological status. The *Riparian- Wetland Initiative for the 1990's* also includes a strategy to focus management on the entire watershed. Entire watershed condition is an important component in assessing whether a riparian-wetland area is functioning properly.

In the past, considerable effort has been expended to inventory, classify, restore, enhance, and protect riparian-wetland areas, but the effort has lacked consistency. The purpose of this document is to provide a thought process for assessing PFC for riparian-wetland areas on BLM-managed lands.

## **B. Approach**

BLM depicts natural riparian-wetland areas as resources whose capability and potential is defined by the interaction of three components: 1) vegetation, 2) landform/soils, and 3) hydrology. A few resource specialists regard fish and wildlife as a fourth element because some wildlife species may alter a riparian-wetland area's capability and potential. However, most classifiers categorize fish and wildlife as a "user," but place wildlife species that can alter the capability and potential of a riparian-wetland site (i.e., beaver) as a special modifier under the hydrology component. BLM takes this approach in its inventory and classification system, Ecological Site Inventory (ESI).

Since natural riparian-wetland areas are characterized by the interactions of vegetation, soils, and hydrology, **the process of assessing whether a riparian-wetland area is functioning properly requires an interdisciplinary (ID) team.** The team should include specialists in vegetation, soils, and hydrology. A biologist also needs to be involved because of the high fish and wildlife values associated with riparian-wetland areas.

To initiate the process, in February 1992, the Director assembled an ID team of specialists to review existing Bureau definitions for PFC and to expand or develop new definitions as required. Appendix A provides the names of the specialists that were involved in this process. The ID team also developed a format for BLM to report functionality to Congress, which will include the table in Appendix B.

## C. Definitions

The terms introduced in BLM's definition of riparian-wetlands are generally understood by resource specialists. However, some confusion still exists with the term ephemeral stream. A stream is a general term for a body of flowing water. In hydrology the term is generally applied to water flowing in a natural channel as distinct from a canal. Streams in natural channels are classified as being perennial, intermittent or seasonal, or ephemeral and are defined as follows (Meinzer, 1923):

**Perennial** - A stream that flows continuously. Perennial streams are generally associated with a water table in the localities through which they flow.

**Intermittent or seasonal** - A stream that flows only at certain times of the year when it receives water from springs or from some surface source such as melting snow in mountainous areas.

**Ephemeral** - A stream that flows only in direct response to precipitation, and whose channel is at all times above the water table.

These terms refer to the continuity of streamflow in **time**; they were developed by the U.S. Geological Survey in the early 1920's, have a long history of use, and are the standard definitions used by BLM resource specialists. Confusion over the distinction between intermittent and ephemeral streams may be minimized by applying Meinzer's (1923) suggestion that the term "intermittent" be arbitrarily restricted to streams that flow continuously for periods of at least 30 days and the term "ephemeral" be arbitrarily restricted to streams that do not flow continuously for at least 30 days. Also, the intermittent stream is to be distinguished from an **interrupted** stream, which is a stream with discontinuities in **space**. Intermittent or seasonal streams usually have visible vegetation or physical characteristics reflective of permanent water influence; for example, the presence of cottonwood.

To understand how riparian-wetland areas operate and to implement proper management practices, thus ensuring an area is functioning properly, **the capability and potential of a riparian-wetland area must be understood**. Assessing functionality is based upon an area's capability and potential. For the purpose of this document, capability and potential are defined as follows:

**Capability** - The highest ecological status a riparian-wetland area can attain given political, social, or economical constraints. These constraints are often referred to as limiting factors.

**Potential** - The highest ecological status an area can attain given no political, social, or economical constraints; often referred to as the "potential natural community" (PNC).

In BLM's annual report to Congress, the following definitions are to be used when completing the table in Appendix B:

**Proper Functioning Condition** - Riparian-wetland areas are functioning properly when adequate vegetation, landform, or large woody debris is present to dissipate stream energy associated with high waterflows, thereby reducing erosion and improving water quality; filter sediment, capture bedload, and aid floodplain development; improve flood-water retention and ground-water recharge; develop root masses that stabilize streambanks against cutting action; develop diverse ponding and channel characteristics to provide the habitat and the water depth, duration, and temperature necessary for fish production, waterfowl breeding, and other uses; and support greater biodiversity. **The functioning condition of riparian-wetland areas is a result of interaction among geology, soil, water, and vegetation.**

**Functional-At Risk** - Riparian-wetland areas that are in functional condition but an existing soil, water, or vegetation attribute makes them susceptible to degradation.

**Nonfunctional** - Riparian-wetland areas that clearly are not providing adequate vegetation, landform, or large woody debris to dissipate stream energy associated with high flows and thus are not reducing erosion, improving water quality, etc., as listed above. The absence of certain physical attributes such as a floodplain where one should be are indicators of nonfunctioning conditions.

**Unknown** - Riparian-wetland areas that BLM lacks sufficient information on to make any form of determination.

## **II. Process**

Most of the Bureau's riparian-wetland areas are found in Alaska and are considered functioning properly because they are in their natural state (USDI, 1991). This is not the case for BLM riparian-wetland areas in the 11 contiguous Western States, as well as small tracts in Alabama, Arkansas, Florida, Louisiana, Minnesota, Mississippi, and Oklahoma. Most of these riparian-wetland areas have been altered by human activities. However, the following process for determining whether an area is functioning properly is the same for Alaska as it is for the other states.

### **A. Review Existing Documents**

To start the process, existing documents that provide a basis for assessing PFC should be reviewed. Technical Reference 1737-5, *Riparian and Wetland Classification Review* (Gebhardt et al., 1990), provides an excellent start as it reviews, in a like format, the more common procedures that are used to classify, inventory, and describe riparian-wetland areas. This document identifies ESI as being the most complete procedure because it provides a process for defining the capability of an area, its



potential, and how it functions. However, not all riparian-wetland areas will require the magnitude provided by ESI to assess functionality.

Technical Reference 1737-2, *The Use of Aerial Photography to Inventory and Monitor Riparian Areas* (Batson et al., 1987), Technical Reference 1737-3, *Inventory and Monitoring of Riparian Areas* (Myers, 1989), and Technical Reference 1737-7, *Procedures for Ecological Site Inventory-With Special Reference to Riparian- Wetland Sites* (Leonard et al., 1992), are three other documents that should be reviewed. These documents provide additional thought processes that will be useful in assessing functional status of riparian-wetland areas.

## **B. Analyze the Definition**

Next, the definition of PFC must be analyzed. One way to do this is by breaking the definition down as follows:

“Riparian-wetland areas are functioning properly when adequate vegetation, landform, or large woody debris is present to:

- 1) dissipate stream energy associated with high waterflows, thereby reducing erosion and improving water quality;
- 2) filter sediment, capture bedload, and aid floodplain development;
- 3) improve flood-water retention and ground-water recharge;
- 4) develop root masses that stabilize streambanks against cutting action;
- 5) develop diverse ponding and channel characteristics to provide the habitat and the water depth, duration, and temperature necessary for fish production, waterfowl breeding, and other uses;
- 6) and support greater biodiversity.”

Riparian areas are functioning properly when there is adequate structure present to provide the listed benefits **applicable** to a particular area. The analysis must be based on the riparian area’s capability and potential. If, for example, the system does not have the potential to support fish habitat, that criteria would not be used in the assessment.

## **C. Assess Functionality**

### *1. Attributes and Processes*

The third aspect of assessing PFC involves understanding the attributes and processes occurring in a riparian-wetland area. Table 1 provides a list of attributes and processes that may occur in any given riparian-wetland area. When assessing PFC, attributes and processes for the area being evaluated need to be identified.

To understand these processes, an example of an alluvial/nongraded valley-bottom type riparian area in both a functional and nonfunctional condition is provided in Figure 1 (Jensen, 1992). Using the Bureau’s definitions for PFC, **State A** represents

**Table 1.** Attributes/Processes List \*

<b>Hydrogeomorphic</b>
Ground-Water Discharge Active Floodplain Ground-Water Recharge Floodplain Storage and Release Flood Modification Bankfull Width Width/Depth Ratio Sinuosity Gradient Stream Power Hydraulic Controls Bed Elevation
<b>Vegetation</b>
Community Types Community Type Distribution Surface Density Canopy Community Dynamics and Succession Recruitment/Reproduction Root Density Survival
<b>Erosion/Deposition</b>
Bank Stability Bed Stability (Bedload Transport Rate) Depositional Features
<b>Soils</b>
Soil Type Distribution of Aerobic/Anaerobic Soils Capillarity Annual Pattern of Soil Water States
<b>Water Quality</b>
Temperature Salinity Nutrients Dissolved Oxygen Sediment

\* This list provides examples of various attributes/processes that may be present in a riparian area. By no means is it complete.

a high degree of bank stability, floodplain, and plant community development, and would be classified as PFC. The important attributes and processes present for **State A** are:

**Hydrogeomorphic** - Active floodplain, floodplain storage and release, flood modification, bankfull width, width/depth ratio, sinuosity, gradient, stream power, and hydraulic controls.

**Vegetation** - Community type (2 of 3), community type distribution (similar in the wet types), root density, canopy, community dynamics, recruitment/reproduction, and survival.

**Erosion/Deposition** - Bank stability.

**Soil** - Distribution of anaerobic soil, capillarity.

**Water Quality** - No change.

**State B** may be properly functioning or functional--at risk. It would be classified as functional if bank stabilizing vegetation is dominant along the reach and other factors such as soil disturbance are not evident. It is important to identify the species of vegetation present since they do vary in their ability to stabilize streambanks and filter sediment.

**State B** would be classified as at risk if bank stabilizing vegetation is not dominant (even though it may be in an improving trend from prior conditions), nondesirable species are present (e.g., Kentucky bluegrass), soil disturbance is evident (e.g., caved banks from livestock or vehicle use), or hydrologic factors such as degraded watershed conditions exist, increasing the probability of extreme flow events that would damage the reach. The following changes in attributes/processes are likely in **State B**:


**Hydrogeomorphic** - Bankfull width (increase), width/depth ratio (increase in width, no change in depth), active floodplain frequency (decrease).

**Vegetation** - Community types changed, community type distribution changed, root density, canopy, community dynamics, recruitment/reproduction, and survival.

**Erosion/Deposition** - Bank stability (decrease).

**Soil** - No change.

**Water Quality** - No significant change.

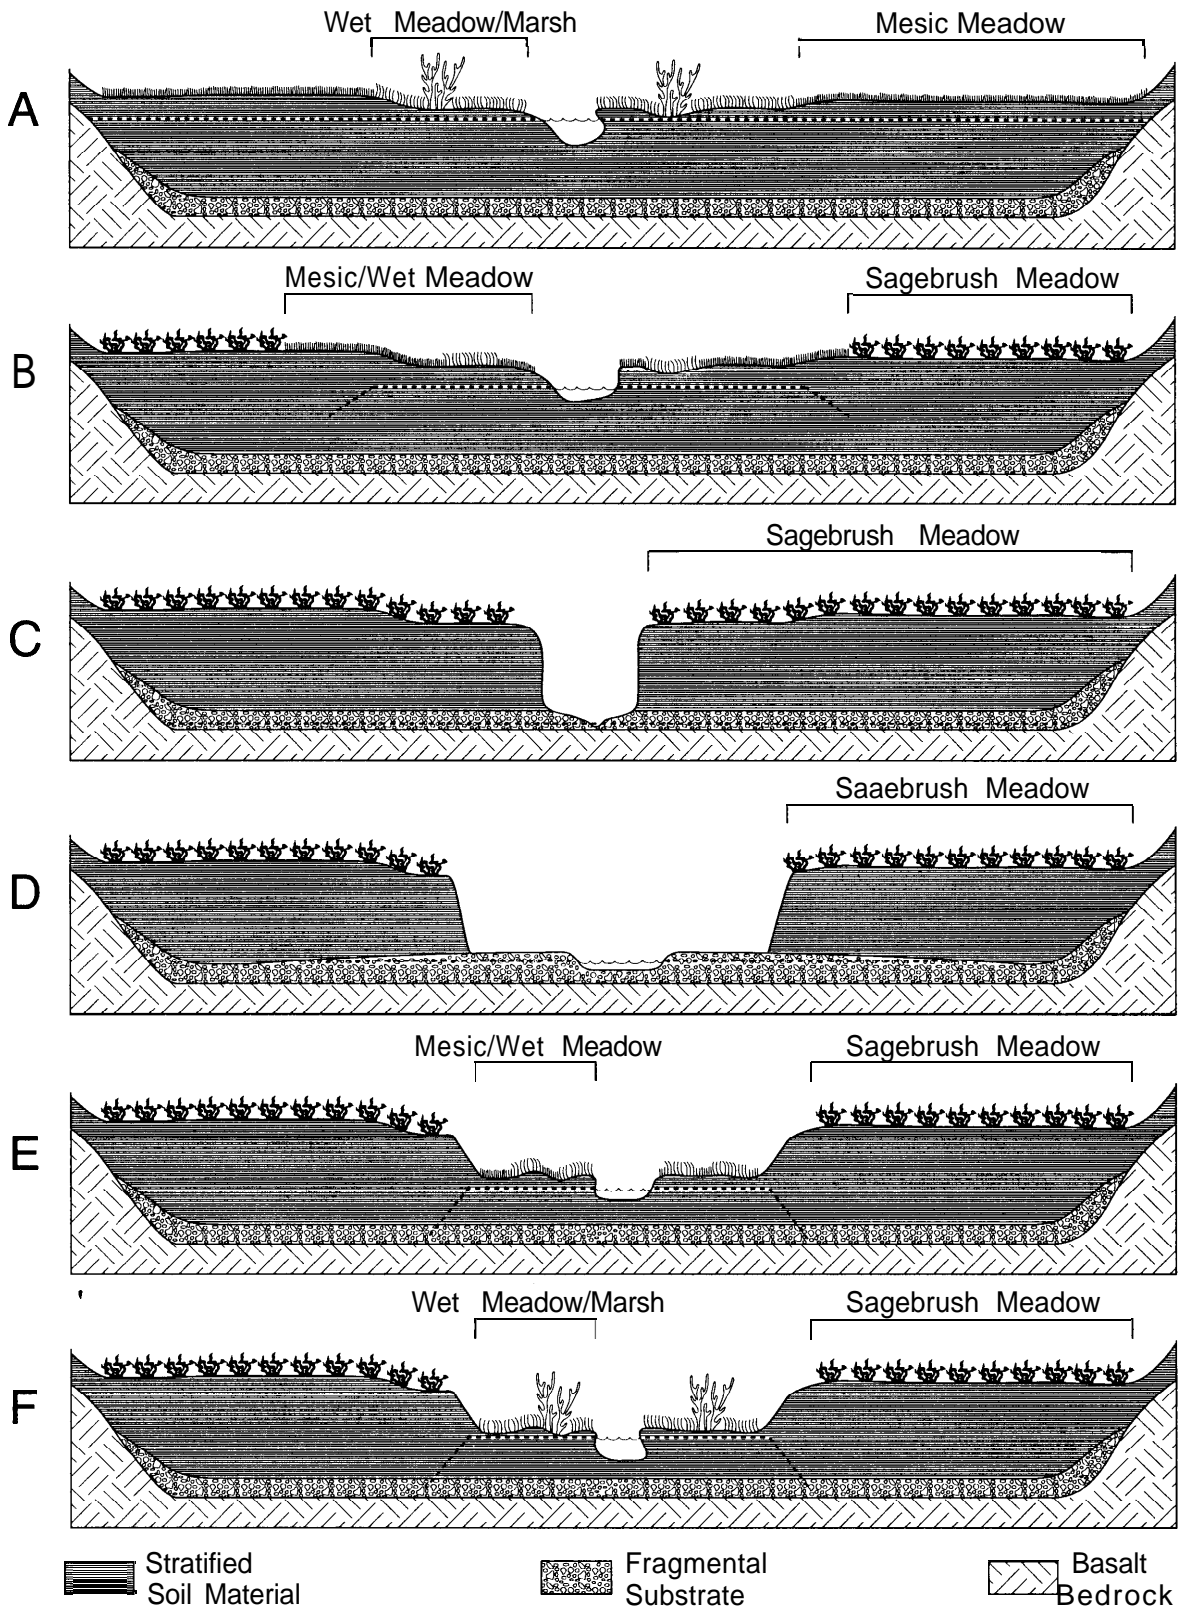

**Figure 1.** Succession of states for alluvial/nongraded valley-bottom type.

**States C and D** would be classified as nonfunctional conditions. **State C** represents incisement of the stream channel to a new base level. There is little or no bank stabilizing vegetation and no floodplain. Channel widening exhibited in **State D** must occur to restore floodplain development. Vegetation, if present, is often only temporary due to the large adjustment process occurring. The following changes in attributes/processes are likely in **States C and D**:

**Hydrogeomorphic** - Bankfull width (increase), width/depth (increase/increase), active floodplain frequency (decrease).

**Vegetation** - Riparian community types lost; community type distribution changed; root density, canopy, community dynamics, recruitment, reproduction, and survival (decrease).

**Erosion/Deposition** - Bank stability (decrease).

**Soil** - Well drained.

**Water Quality** - Temperature (increase), sediment (increase).

**State E** may again be classified as functional-at risk or functional depending on vegetation, soil, and hydrologic attributes. Establishment of the floodplain and bank stabilizing vegetation indicate reestablishment of functional conditions. However, stream segments in this state are usually at risk for the same reasons described for **State B**. Attributes and processes would revert back to those that appear in **State B**.

**State F** is classified as functioning properly even though the riparian area may not have achieved the greatest extent exhibited in **State A**. Banks are stabilized and exhibit channel geometry similar to **State A**. The floodplain has widened to the extent that confinement of peak flows is only occasional and aggrading processes are slowed because of the surface area available. The largest difference between **States A and F** occurs in size and extent of hydrologic influence, which regulates size and extent of the riparian area.

This alluvial/nongraded valley-bottom example is found in the Great Basin and represents only one of many types found on public lands. However, it is important to remember that there are other types and to understand that:

**Riparian-wetland areas do have fundamental commonalities in how they function, but they also have their own unique attributes. Riparian-wetland areas can and do function quite differently. As a result, most areas need to be evaluated against their own capability and potential. Even for similar areas, human influence may have introduced component(s) that have changed the area's capability and potential. Assessments, to be correct, must consider these factors and the uniqueness of each system.**

Appendix C contains examples of other kinds of riverine systems found on BLM managed lands (Jensen, 1992). The analogy used for Figure 1 can be applied to most of the examples found in Appendix C because differing channel types do have functional commonality. However, differing channel types may accommodate their own unique evolutionary processes. Information concerning the classification system used by Jensen can be found in BLM technical reference TR 1737-5 (Gebhardt et al., 1990).

## **2. *Capability and Potential***

Assessing functionality then involves determining a riparian-wetland area's capability and potential using an approach such as the following:

- Look for relic areas (exclosures, preserves, etc.).
- Seek out historic photos, survey notes, and/or documents that indicate historic condition.
- Search out species lists (animals & plants - historic & present).
- Determine species habitat needs (animals & plants) related to species that are/were present.
- Examine the soils and determine if they were saturated at one time and are now well drained?
- Examine the hydrology, establish cross sections if necessary to determine frequency and duration of flooding.
- Identify vegetation that currently exists. Are they the same species that occurred historically?
- Determine the entire watershed's general condition and identify its major landform( s).
- Look for limiting factors, both human-caused and natural, and determine if they can be corrected.

This approach forms the basis for initiating an inventory effort like ESI. For some areas, conducting an ESI effort will be the only way to assess an area's capability and potential.

Some riparian-wetland areas may be prevented from achieving their potential because of limiting factors such as human activities. Most of these limiting factors can be rectified through proper management. However, some limiting factors such as dams and transmountain diversions are not as easy to correct. The placement of dams and transmountain diversions can result in a riparian-wetland area's flow regime being altered, thus changing the area's capability. For example, cottonwood trees are maintained by periodic flooding, which creates point bars for seedling establishment. A dam or transmountain diversion that reduces or eliminates the potential for flooding may remove the potential for cottonwoods to remain in that area. PFC must be assessed in relationship to the area's capability.

### *3. Functioning Condition*

When determining whether a riparian-wetland area is functioning properly, the condition of the entire watershed, including the uplands and tributary watershed system, is important. The entire watershed can influence the quality, abundance, and stability of downstream resources by controlling production of sediment and nutrients, influencing streamflow, and modifying the distribution of chemicals throughout the riparian-wetland area. Riparian-wetland health (functioning condition), an important component of watershed condition, refers to the ecological status of vegetation, geomorphic, and hydrologic development, along with the degree of structural integrity exhibited by the riparian-wetland area. A healthy riparian-wetland area is in dynamic equilibrium with the streamflow forces and channel aggradation/degradation processes producing change with vegetative, geomorphic, and structural resistance. In a healthy situation, the channel network adjusts in form and slope to handle increases in stormflow/snowmelt runoff with limited perturbation of channel and associated riparian-wetland plant communities.

**Riparian-wetland areas can function properly before they achieve their Potential Plant Community (PPC) or Potential Natural Community (PNC).** In fact, some would argue that riparian-wetland areas are always functioning properly, no matter what state they are in. From the perspective of fluvial geomorphology, it is true that the channel is constantly adjusting itself to the water and sediment load delivered to it from the watershed; however, BLM's definition goes beyond the processes of channel evolution and includes vegetation and biological attributes. The Bureau's definition does not mean PNC or optimal conditions for a particular species have to be achieved to be rated as functioning properly.

Figures 2 and 3 provide an example of the relationship between PFC and vegetation community succession for one area. Assuming succession continues uninterrupted (Step 1 to Step 2 in Figure 2), the channel will evolve through some predictable changes from bare ground to PNC (although not necessarily as linearly as depicted). The riparian-wetland area will progress through phases of not functioning, functioning-at risk, and properly functioning along with plant succession. In this example, PFC occurs at the mid-seral stage (Step 3). Figure 3 shows a stream cross section of each condition (A-E) displayed in Figure 2.

At various stages within this successional process, the stream can provide a variety of values for different uses (Step 4). In Figure 2, optimal conditions for grazing occur when forage is abundant and the area is stable and sustainable (mid-seral). Wildlife goals depend upon the species for which the area is being managed. If the riparian zone in Figure 2 is to provide habitat for shrub nesting birds, the optimum conditions would be from mid- to late seral. Trout habitat conditions would be optimum from mid-seral to late seral. The threshold for any goal is at least PFC because any rating below this would not be sustainable.

For some areas, PFC may occur from early seral to late seral. Desired plant community (DPC) would be determined based on management objectives through an interdisciplinary approach (Step 5). Figure 2 is an example of only one riparian-wetland area.

When rating functionality, it will be easy to categorize many riparian-wetland areas as PFC or nonfunctional. For others it will not be easy. Difficulty in rating PFC usually arises in identifying the thresholds that allow a riparian-wetland area to move from one category to another. To provide consistency in reporting PFC, BLM has established a standard checklist for field offices to initiate this process (Appendix D).


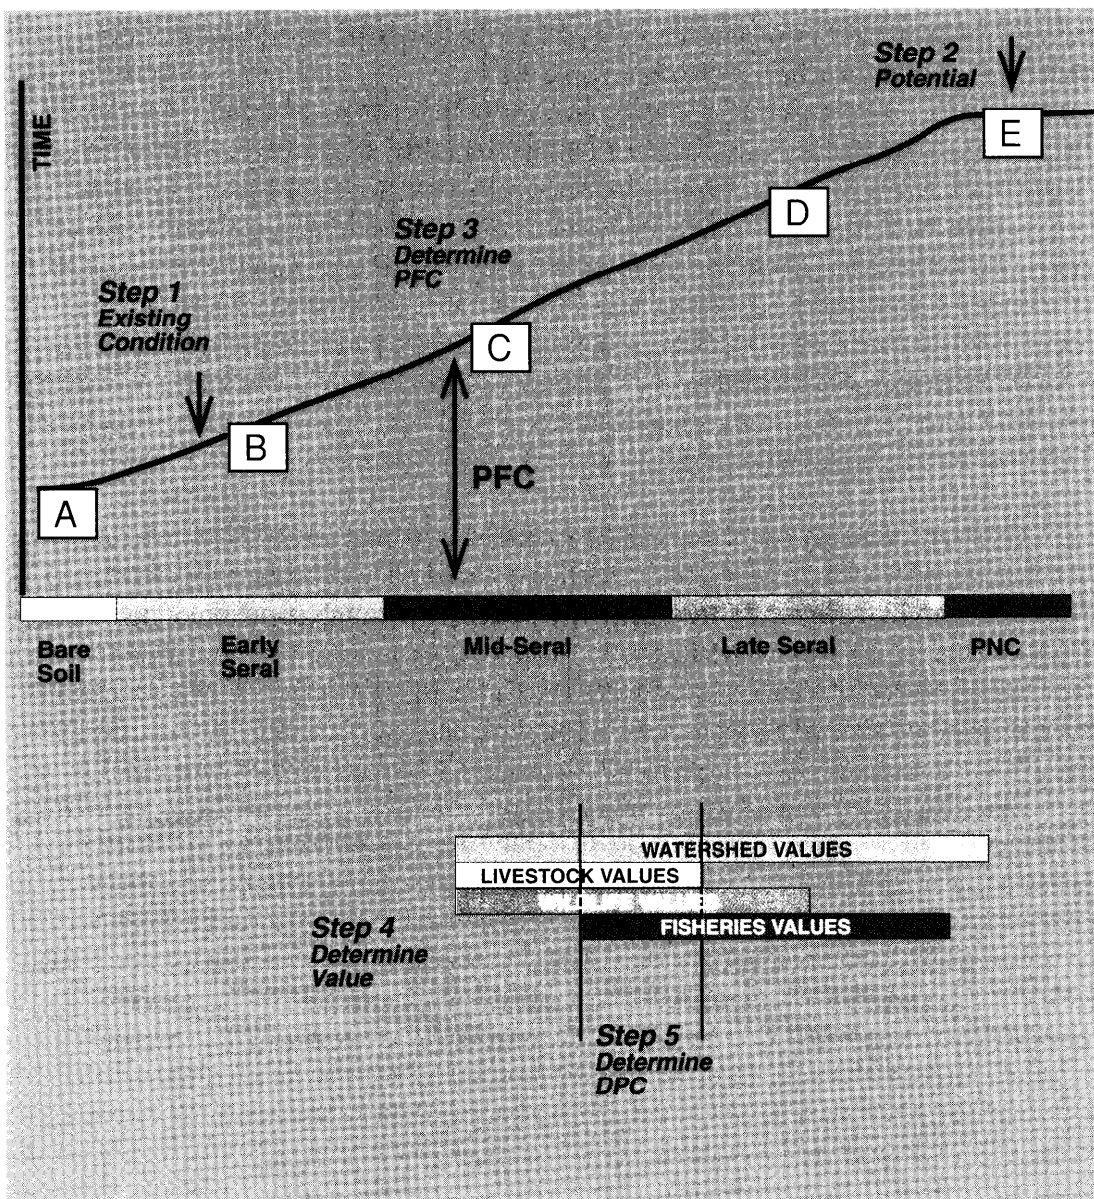



Figure 2. Succession for stream recovery.




**A**  
Bare Ground

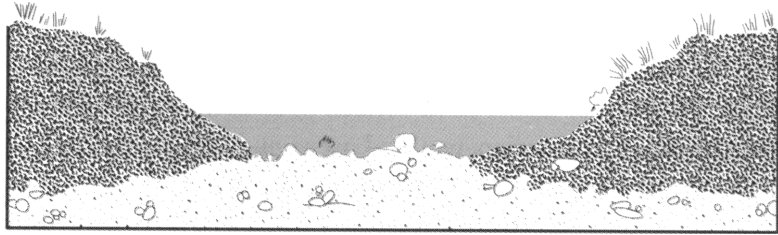


**B**  
Early Seral

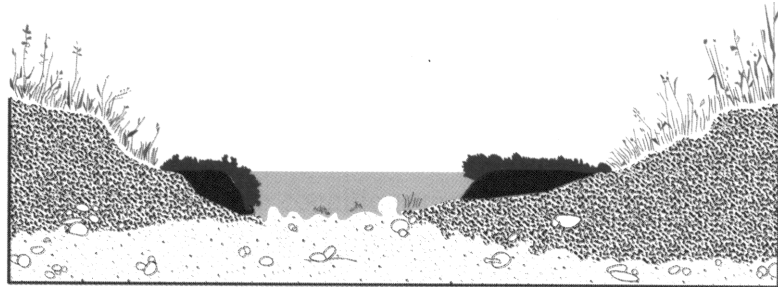


**C**  
Mid-Seral

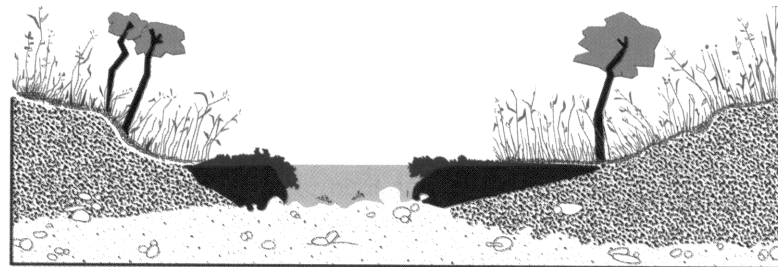

**D**  
Late Seral

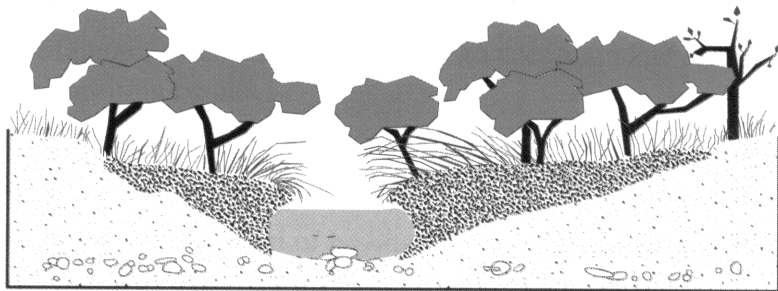

**E**  
PNC or PPC

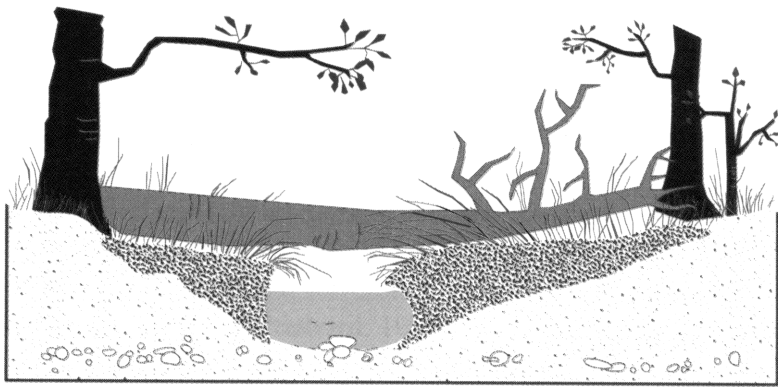

**Figure 3.** Stream cross sections.

BLM's checklist may not answer the question of functionality for all riparian-wetland areas. Some areas may require a more intensive inventory effort, like ESI. Elements can be added to BLM's standard checklist to address unique riparian-wetland attributes. To further assist field offices in assessing functionality, Appendix E provides examples of riparian-wetland areas and depicts the categories of PFC, functional-at risk, and nonfunctional.

The process described in this document has concentrated on lotic forms of riparian-wetland areas for two reasons: 1) they are the form of wetland BLM most frequently has to resolve conflicts on, and 2) inventory, classification, and monitoring efforts within and outside the Bureau have concentrated on this type of resource. However, the process would be the same for lentic forms of wetlands. Additional guidance will be developed for lentic wetlands as BLM gathers more information on them.

### III. Instituting the Process

#### A. Planning

A logical manner to incorporate the information collected into a management plan is as follows (refer to Figure 2 in the Functioning Condition section):

- Step 1 Existing Condition** - Determine the existing riparian-wetland and watershed condition using BLM standard inventory methods.
- Step 2 Potential Condition** - Determine PNC by using relic areas, historic photos, etc. (ESI process).
- Step 3 PFC** - Determine the minimum conditions required for the area to function properly.
- Step 4 Resource Values** - Determine existing and potential resource values and the plant communities necessary to support these values.
- Step 5 Management Goals** - Negotiate specific objectives to reach management goals for the watershed, DPC, or Desired Future Condition.
- Step 6 Planned Actions** - Design management actions to achieve DPC.
- Step 7 Monitoring** - Design appropriate monitoring strategies to assess progress towards meeting management goals.
- Step 8 Flexibility** - Maintain management flexibility to accommodate change based upon monitoring results.

#### B. Management

For BLM to be successful in reaching its goal of having 75 percent of its riparian-wetland areas functioning properly by 1997, best management practices need to be set in motion. Successful management strategies address the entire watershed. Upland and riparian areas are interrelated and cannot be considered separately.

Two other documents can be helpful in assisting with this process: Technical Reference 1737-4, *Grazing Management in Riparian Areas* (Kinch, 1989), provides grazing management principles, concepts, and practices that have been effective in improving and maintaining desired conditions on riparian-wetland areas. For other forms of management such as recreation development, mining opportunities, timber practices, and watershed treatments, Technical Reference 1737-6, *Management Techniques in Riparian Areas* (Smith and Prichard, 1992), provides suggested management practices. With a change in management, most riparian-wetland areas can achieve PFC in a few years, but some will take years to achieve the identified DPC or advanced ecological status.

### **C. Monitoring**

Management effectiveness can be assessed and progress towards meeting PFC can be documented through monitoring. Sites should be revisited periodically as part of the overall monitoring program. Areas rated at a single point in time can reflect short term factors such as climatic conditions. Monitoring will reflect longer-term trends. Technical references such as TR 1737-3 (Myers, 1989) are tools that can be used to develop monitoring criteria.

## IV Summary

Riparian-wetland areas constitute an important resource on lands managed by BLM. BLM's goal is to have 75 percent of its riparian-wetlands functioning properly by 1997. This technical reference provides a thought process for assessing functioning condition.

The status of some riparian-wetland areas will be relatively easy to discern while the status of others will be less evident. Appendix D contains the minimum national standards that BLM field offices will use in making this assessment. For hard-to-discern areas, Ecological Site Inventory may be the only method to determine capability and potential and assess functionality. Using either method will require an interdisciplinary team to adequately address the complexities associated with riparian-wetland areas and to report their functioning condition.

Appendix B contains the forms for reporting functioning condition. Riparian areas are reported in four categories: proper functioning condition, functional-at risk, nonfunctional, and unknown. Areas with and without specific riparian management and objectives are reported separately. The Definitions section of this technical reference describes the meanings of these terms.

Trend is reported for areas that are identified as functional-at risk, and is a key consideration in interpreting the data. Areas identified as functional-at risk with a downward trend are often the highest management priority because a decline in resource values is apparent. Yet these areas often retain much of the resiliency associated with a functioning area. There is usually an opportunity to reverse this trend through changes in management. Functional-at risk areas with an upward trend are often a priority for monitoring efforts. These areas are improving but remain at risk. Monitoring these areas assures that upward trends continue.

Conversely, trend is not reported for areas that are nonfunctional. While these areas could theoretically still be in decline, most of the riparian values have already been lost. The presence of sufficient riparian-wetland attributes and processes to warrant a determination of trend usually results in a designation of functional-at risk.

It is common for an area in PFC to continue to have an upward trend. Many sites that are properly functioning must continue to improve to meet site-specific objectives. However a downward trend may put the area at risk. Once proper functioning condition is reached, trend relates to specific objectives. Therefore, it is not part of this data report.

The lack of specific information will place many riparian-wetland areas into the category of unknown. In order for BLM to make an adequate assessment of progress towards its goal, it is imperative that areas for which no data exists be evaluated and added to the data base. As information is acquired and resource values are identified, best management practices need to be set in motion. Successful management strategies have to address the entire watershed, as upland and riparian-wetland areas are interrelated and cannot be considered separately.

Examples provided in this document have concentrated on lotic riparian areas for two reasons: 1) they are the form of wetland BLM most frequently has to resolve conflicts on, and 2) inventory, classification, and monitoring efforts within and outside the Bureau have concentrated on this type of resource the most. However, the thought process for assessing functionality of lentic areas would be the same. In the future, a technical reference will be developed with more specific information for lentic wetlands.

# Literature Cited

- Batson, F.T., P.E. Cuplin, and W.S. Crisco. 1987. Riparian Area Management: The Use of Aerial Photography to Inventory and Monitor Riparian Areas. Bureau of Land Management, BLM/YA/PT-87/021+1737, Service Center, CO. 16 pp.
- Gebhardt, K., S. Leonard, G. Staidl, and D. Prichard. 1990. Riparian Area Management: Riparian and Wetland Classification Review. Bureau of Land Management, BLM/YA/PT-91/002+1737, Service Center, CO. 56 pp.
- Jensen, S. 1992. White Horse Associates. Smithfield, UT.
- Kinch, G. 1989. Riparian Area Management: Grazing Management in Riparian Areas. Bureau of Land Management, BLM/YA/PT-87/021+1737, Service Center, CO. 48 pp.
- Leonard, S., G. Staidl, J. Fogg, K. Gebhardt, W. Hagenbuck, and D. Prichard. 1992. Riparian Area Management: Procedures for Ecological Site Inventory-with Special Reference to Riparian-Wetland Sites. Bureau of Land Management, BLM/SC/PT-92/004+ 1737, Service Center, CO. 135 pp.
- Meinzer, O.E. 1923. Outline of Ground-Water Hydrology. Geological Survey Water-Supply Paper 494. U.S. Geological Survey, Washington, DC. 71 pp.
- Myers, L.H. 1989. Riparian Area Management: Inventory and Monitoring of Riparian Areas. Bureau of Land Management, BLM/YA/PT-89/022+1737, Service Center, CO. 89 pp.
- Smith, B. and D. Prichard. 1992. Riparian Area Management: Management Techniques in Riparian Areas. Bureau of Land Management, BLM/SC/PT-92/003+1737, Service Center, CO. 44 pp.
- U.S. Department of Interior. 1991. Riparian-Wetland Initiative for the 1990's. Bureau of Land Management, BLM/WO/GI-91/001+4340, Washington, DC. 50 PP.
- \_\_\_\_\_. 1992. Annual Report of Accomplishments, FY 1992. Bureau of Land Management, Washington, DC. 182 pp.
- \_\_\_\_\_. 1992. 1737 - Riparian-Wetland Area Management. Bureau of Land Management, Washington, DC. 38 pp.

# Glossary of Terms

**Active Floodplain** - The low-lying land surface adjacent to a stream and formed under the present flow regime. The active floodplain is inundated at least once or twice (on average) every 3 years.

**Advanced Ecological Status** - A community with a high coefficient of similarity to a defined or perceived PNC for an ecological site, usually late seral or PNC ecological status.

**Annual Pattern of Soil Water States** - A description of field soil water over the year as applied to horizons, layers, or standard depth zones. Water state is reported by layers.

**Hydraulic Control** - Features of landform (bedform and bed material), vegetation, or organic debris that control the relationship between stage (depth) and flow rate (discharge) of a stream.

**Hydrogeomorphic** - Features pertaining to the hydrology and/or geomorphology of the stream system.

**Potential Plant Community** - Represents the seral stage the botanical community would achieve if all successional sequences were completed without human interference under the present environmental conditions.

**Riparian-Wetland Ecological Site** - An area of land with a specific potential plant community and specific physical site characteristics, differing from other areas of land in its ability to produce vegetation and to respond to management. Ecological site is synonymous with range site.

**Seral Stage** - One of a series of plant communities that follows another in time on a specific site.

**Stream Power** - A measure of a stream's ability to erode and transport sediment. It is equal to the product of shear stress and velocity.

**Vegetation Community Dynamics** - Response of plant communities to changes in their environment, to their use, and to stresses to which they are subjected. Climatic cycles, fire, insects, grazing, and physical disturbances are some of the many causes of changes in plant communities. Some changes are temporary while others are long lasting.



**Vegetation Community Succession** - Primary succession is a sequence of plant community changes from the initial colonization of a bare soil toward a PNC. Secondary succession may involve sequences of plant community change from PNC due to perturbations, or a sequence toward PNC again following a perturbation. Vegetation community succession may be accompanied by subtle but significant changes in temporal soil characteristics such as bulk density, nutrient cycling, and microclimatic changes, but is differentiated from major physical state changes such as landform modification or long-term elevation or lowering of a water table that would change the PNC of an ecological site.